


### **ALP6001R**

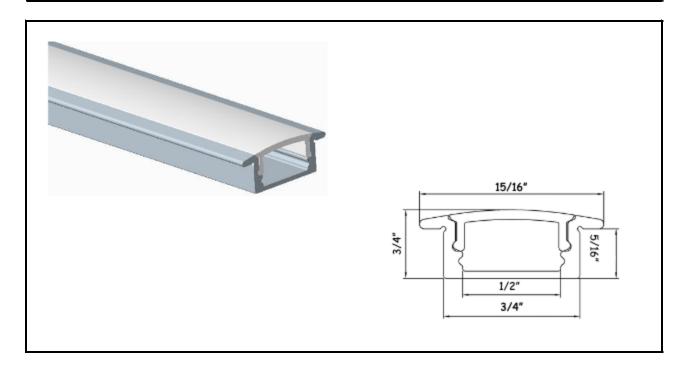

# Main parts needed to mount the extrusion



# Tools needed for mounting:


Screwdriver & Glue

Contact: Sales@infigreen.com

Specification	
Aluminum Profile:	6063-T5
Diffuser:	PCdiffusedcover/PMMAopalcover/PMMAsemi-clearcover/PMMAclearcove
Length:	2m
Finish:	Silver Anodized, Powder Coated White, Black or Other Color
Installation:	Recessed



### **Installation Instruction**

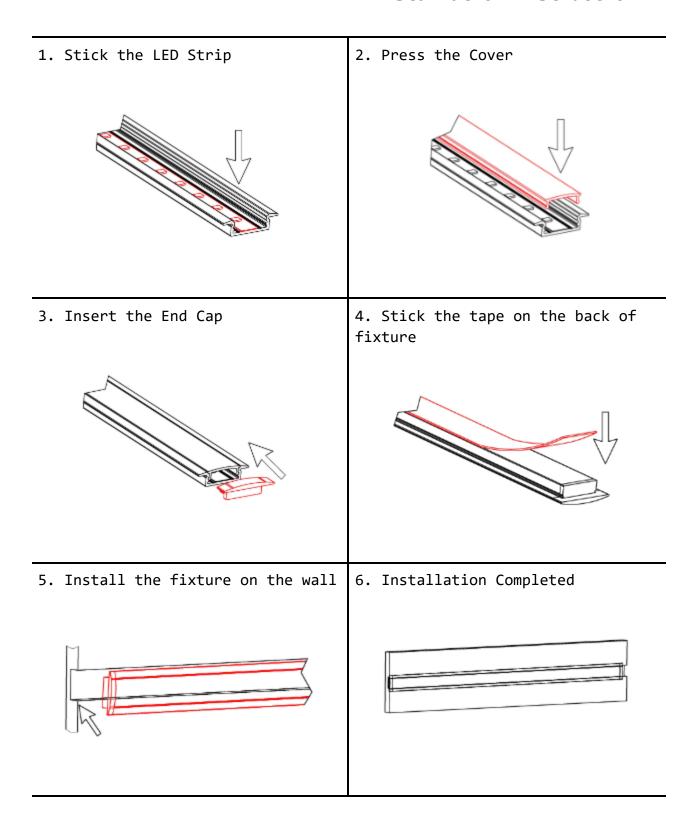




# Other Mounting Instruction


Option#1 - 1. Spread Glue in the Groove




2. Insert the End Cap (B) and (C), then attach the Profile to the Groove




3. Mount the LED strip (E), insert the cover (D), Lead out the power cable




4. Run the cable to to the power source, then connect power




Option#2 - 1. Mount the LED Strip (E),
insert the cover (D), insert end cap (B)




2. Mount the metal clip (F) on the board



3. Mount the profile on the clip, lead out the power cable




4. Run the cable to the power source, connect power

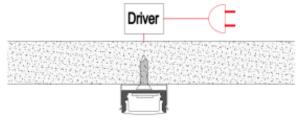





Option#3 - 1. Mount the adjustable clip
(G) on the wall




2. Mount the profile on the clip, lead out the power cable

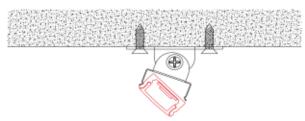

3. Adjust the profile angle

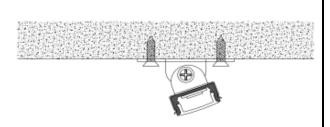

4. Run the cable to the power source, connect power

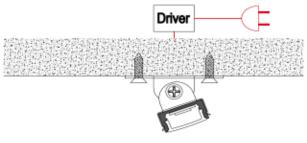

### ALP6001R Accessories

### EC-ALP6001R



End Cap With Hole

#### EC-ALP6001R



End Cap With Hole