



ALP-6071

Mounting Instruction

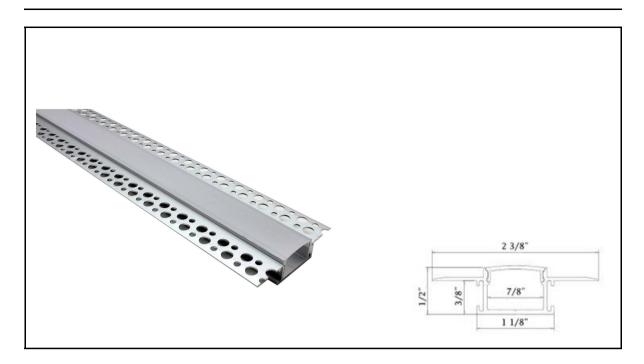

Main parts needed to mount the extrusion

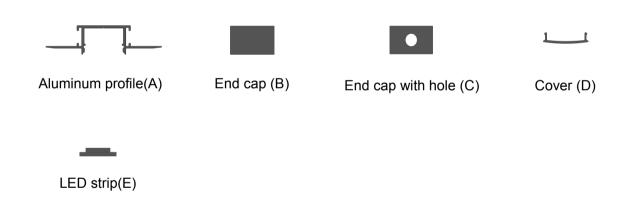

Tools needed for mounting:

Screwdriver


Sales@infigreen.com




Mounting Instruction

1.Insert the end caps (B) and (C), then mount the aluminum profile(A) on the ceiling.


2.Apply a layer of plaster to the profile and ceiling, and then paint the surface to finish.






3. Mount the LED strip(E), insert the cover(D), lead out the power cable.

4. Run the cable to the power source, connect power.

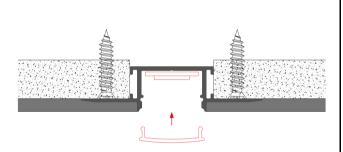

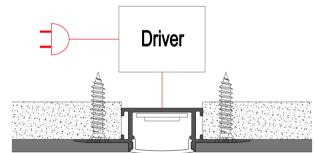





EC-ALP6071




End Caps





Inside 90 Degree Connector

JC90-ALP6081

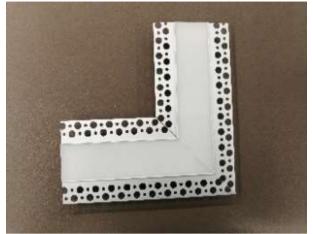

Flat L Connector

JC90OL-ALP6081



Outside 90 Degree Connector